

How to add an RTS Control Device to a Model 9300-RTS motor

These instructions will explain how to add an RTS transmitter, or DecoFlex wireless wall switch, to a Model 9300 series, RTS tubular motor.

The programming button is located on the back of the RTS transmitter, and on the front of the DecoFlex wall switch.

1. Using an existing RTS control device, either a transmitter or wireless wall switch, that is already operating the motor, activate the RTS memory, by using a paper clip to press the programming button for at least 2 seconds.
2. Release the button after the shade jogs briefly up and down. This jog indicates the motor is ready to be programmed.
3. Select the new transmitter or wireless wall switch. When using a multichannel remote, select the channel you wish to add.
4. Press the programming button, until the shade briefly jogs up and down.
5. The new transmitter or switch has been programmed.

To watch a video demonstration of this procedure, please view [Instructional Video #9](#).