

Model 9700 Operating Instructions for Pirouette® and Silhouette®

- 1. Select the individual or group channel.
- 2. To lower the shade press and release the down button. (Shade will lower to the close position and the vanes will open).
- 3. To lower the shade and tilt the vanes closed for privacy, press and release the "my" button.
- 4. To tilt the vanes when the shade is closed, press and <u>hold</u> the up or down button. Release the button when the shade is in the desired position.
- 5. To open the shade, press and release the up button.
- 6. To stop the shade at any point, press and release the "my" button during operation.

