

Ti-RF Transmitter Instructions and Changing Battery



Transmitter Instructions:

Address No. LED Indicator

Open Button

Stop Button

Close Button

Address No. Selection Button

CHANGING BATTERY:

1. Use one Energizer CR2032 3V lithium battery. Do not use Duracell.
2. Remove single screw on back.
3. Gently push and slide down on front of transmitter.
4. Insert new Energizer CR2032 lithium battery.
5. Reinstall front cover by gently pushing and sliding up on cover.
6. Install single screw on back of transmitter.