

SOMFY INSTRUCTIONS


CHRONIS COMFORT RTS

WIREFREE™ TIMER

Part# 1805176

NOTE: The Chronis Comfort RTS WireFree™ timer is pre-set to open window coverings at 7:30pm Monday to Friday, at 8:00am on weekends and to close at sunset. These parameters may be modified with professional programming assistance. Please contact Somfy at somfytech@somfy.com or call your local dealer at somfysystems.com/locatedealer.

Programming current time of day and date is required. See the following instructions.

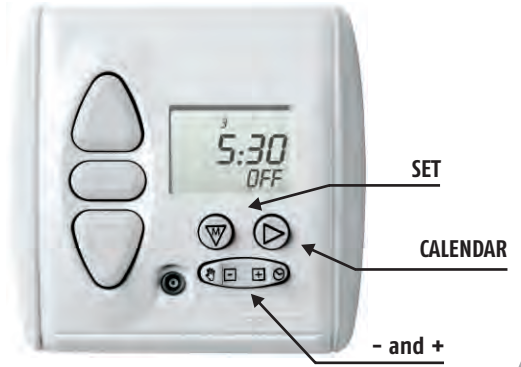


PROGRAMMING - ADDING A CHRONIS TIMER CONTROL

NOTE: During initial programming it is recommended to provide power only to the motor or RTS receiver being programmed

A previously programmed Telis transmitter can be used to add a new Chronis Comfort Timer to the Motorized Window Covering. If a Telis transmitter has not been previously programmed. Please refer to the installation instructions of the relevant RTS motorized window covering.

1. Remove plastic battery interrupter from back of Chronis Timer. Unit will assume power at this time.

2. Using the previously programmed Telis remote, press and hold the programming button on back of remote until window covering "jogs" ("jog" is brief back and forth movement of the window covering)

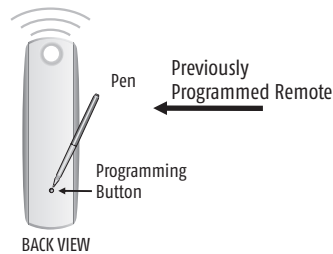

3. Carefully remove front cover of Chronis Timer, and using a paper clip, pen, or similar device, briefly press the programming button on the Chronis Timer until the window covering "jogs". Window covering has now learned the commands of the Chronis Timer.




PROGRAMMING - SETTING THE CURRENT TIME

1. Press and hold the button until the word "CLOC" displays on LCD screen.



3. Adjust to current time using the (-) or (+) buttons.

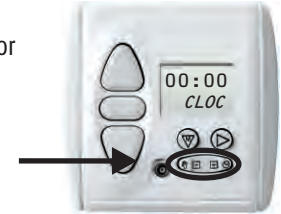

2. Briefly press the button. The time display will blink on LCD screen.



4. Press and hold the button to confirm current time. Displayed time will blink twice as button is held, then display newly set time.




Note: The time display in military time/24 hour format. See chart for time conversion.

12/24 Hr Time Conversion

12pm	1pm	2pm	3pm	4pm	5pm	6pm	7pm	8pm	9pm	10pm	11pm	12am
12pm	13pm	14pm	15pm	16pm	17pm	18pm	19pm	20pm	21pm	22pm	23pm	24pm

PROGRAMMING - SETTING THE CURRENT DATE


1. Press and hold the button until the word "CLOC" displays on LCD screen.

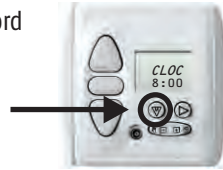

2. Briefly press the button until the word "DATE" displays on LCD screen.



3. Briefly press the button. Day of the month display will blink on LCD screen.

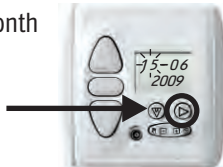

4. Adjust to current day of the month using the (-) or (+) buttons.



5. Briefly press the button. Month display will blink on LCD screen.



6. Adjust to current month using the (-) or (+) buttons.



7. Briefly press the button. Year display will blink on LCD screen.



8. Adjust to current year using the (-) or (+) buttons.



9. Press and hold the button to confirm Day/Month Year. Displayed Year will blink twice as button is held. New date is now set. Display will return to main screen.



PROGRAMMING - SETTING AUTOMATIC (UP & DOWN) COMMAND TIMES

NOTE: The Chronis Comfort RTS WireFree™ timer is pre-set to open window coverings at 7:30AM Monday - Friday, at 8:00AM on weekends, and to close at sunset. These parameters may be modified with professional programming assistance. Please contact Somfy at somfytech@somfy.com or call your local dealer at somfysystems.com/locatedealer

Changing "UP" or "OPEN" Time

1. Press and hold the button until the word "CLOC" displays on LCD screen.



2. Briefly press the button until the word "DATE" displays on LCD screen.



3. Briefly press the button until the word "UP 1" displays on LCD screen.



4. Briefly press the button. The word "Time" will blink on LCD screen.



5. Briefly press the button. The current set "UP TIME" and days of the week (1-7) will blink on LCD screen.



- 5a. (Optional) To change the "UP TIME" for a specific day of week briefly press the button repeatedly to select day(s) 1-7 or all. The selected day will blink on the LCD display along with the respective UP time for that day. See reverse chart for number -to-day conversion.



Days of Week						
1	2	3	4	5	6	7
M	T	W	T	F	S	S

6. Adjust time using the (-) or (+) buttons. New time and day(s) selection will blink.



7. Press and hold the button to confirm "UP TIME" and "DAY" and exit programming. Otherwise, continue to briefly press the button to cycle thru the days of the week (1-7) then adjust respective time as in step 6.



PROGRAMMING - SETTING AUTOMATIC (UP & DOWN) COMMAND TIMES

NOTE: The Chronis Comfort RTS WireFree™ timer is pre-set to open window coverings at 7:30AM Monday - Friday, at 8:00AM on weekends, and to close at sunset. These parameters may be modified with processional programming assistance. Please contact Somfy at somfytech@somfy.com or call your local dealer at somfysystems.com/locatedealer

Changing "DOWN" or "CLOSE" Time

1. Press and hold the  button until the word "CLOC" displays on LCD screen.




2. Briefly press the  button until the word "DATE" displays on LCD screen.




3. Briefly press the  button until the word "UP 1" displays on LCD screen.



4. Briefly press the  button until the word "UP 2" displays on LCD screen.

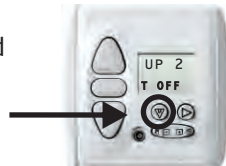


5. Briefly press the  button until the word "dn 1" displays on LCD screen.

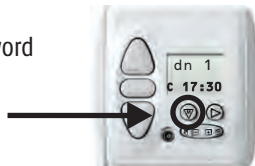


6. Briefly press the  button until the word "COS" will blink on LCD screen.




7. Adjust to "TIME MODE" by briefly pressing the (-) button. The word "TIME" will blink on the LCD screen.

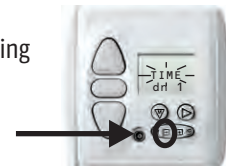




8. Briefly press the  button. The current set "DOWN TIME" and days of the week (1-7) will blink on LCD screen.




- 8a. (Optional) To change the "DOWN TIME" for a specific day of week briefly press the  button repeatedly to select day(s) 1-7 or all. The selected day will blink on the LCD display along with the respective "DOWN TIME" for that day. See Reference chart for number/day conversion.

Days of Week						
1	2	3	4	5	6	7
M	T	W	T	F	S	S

9. Adjust time using the (-) or (+) buttons  . New time and day(s) selection will blink.

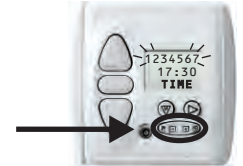

10. Press and hold the  button to confirm "DOWN TIME" and "DAY" and exit programming. Otherwise, continue to briefly press the  button to cycle thru the days of the week (1-7) then adjust respective time as in step 6.

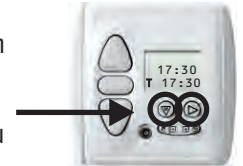

NOTE: Changing to "TIME MODE" will disable the Chronis Timer from automatically closing the window covering(s) at dusk, therefore permitting the automatic close command to be selected by a pre-set time of day.

EXAMPLE: If it is not desired to have the window coverings close (or go "down") according to sunset, the user may define a preset close or down time.


Note: The time display in military time/24 hour format. See chart for time conversion.

12/24 Hr Time Conversion												
12pm	1pm	2pm	3pm	4pm	5pm	6pm	7pm	8pm	9pm	10pm	11pm	12am
12pm	13pm	14pm	15pm	16pm	17pm	18pm	19pm	20pm	21pm	22pm	23pm	24pm

PROGRAMMING - SETTING VACATION (SECURITY) MODE

Vacation mode takes the normal automatic timer settings and randomly varies them (+ or -) by 15 minutes each day. This gives your home the appearance of being occupied.

1. Press and hold the (+)  button until the word "SEC" is displayed on the LCD screen.

To cancel VACATION mode, (return to standard time settings) simply press and hold the (+)  button until the word "SEC" is no longer displayed on the LCD screen.




PROGRAMMING - TURNING OFF ALL AUTOMATIC FUNCTIONS

When the Chronis Timer is set to OFF, all automatic timer functions are disabled. Window coverings however can be operated manually via the UP/DOWN/STOP buttons located on the timer control.

1. Press and hold the (-)  button until the word "OFF" is displayed on the LCD screen.

To turn the automatic functions ON, press and hold the (+) button until the word "OFF" is no longer displayed in the LCD screen.

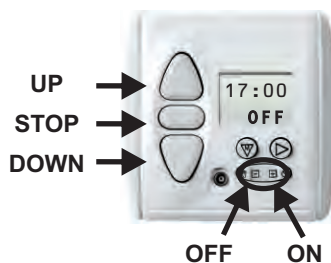

CHANGING THE BATTERIES

1. Grasp the top edge of the timer and pull towards you to remove the plastic cover.
2. Slide the timer up to remove it from the mounting bracket.
3. Remove batteries. Replace with size AAA.
4. Place timer back on mounting bracket and slide it down to secure.
5. Secure front cover to timer.

